


# MANUAL DE INSTALAÇÃO PROTETOR DE CÁRTER

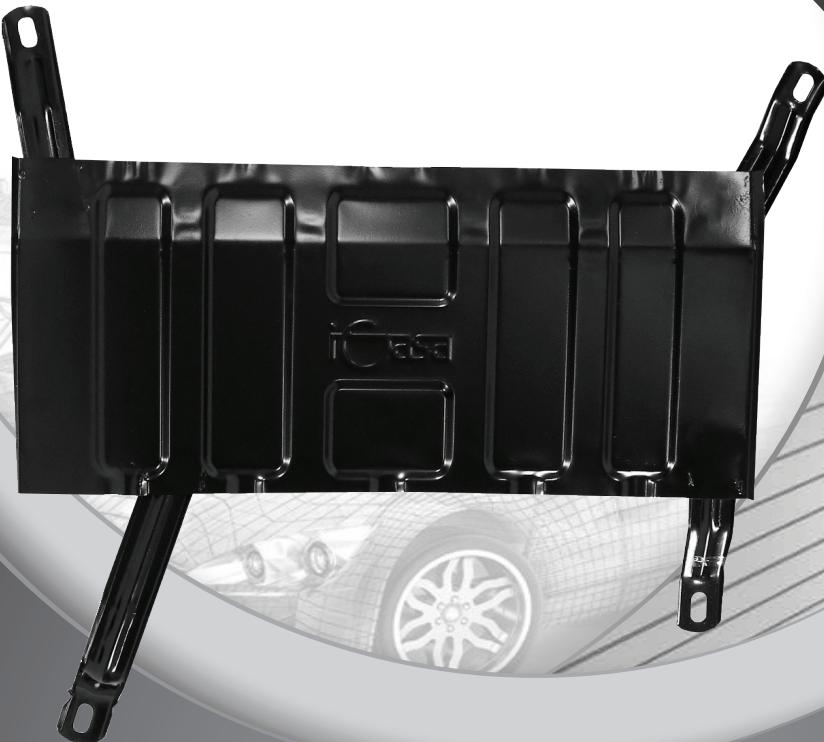

**VOLKSWAGEN**  
**TPGP10002 / TPECO10002**

VOLKSWAGEN UP (A PARTIR DE 2014)



# MANUAL DE INSTALAÇÃO



PROTETOR DE CÁRTER

**TPGP10002**

**TPECO10002**

Para instalação utilize os seguintes itens:

<b>A</b> A diagram showing a metal mesh grille (protector) with a central vertical bar and four horizontal bars, secured by two zip ties.	<b>B</b> Two threaded metal washers with a central slot and a piece of wire or cable passing through them.	<b>C</b> Four large hexagonal metal washers.
Protetor de cárter	2 Parafusos com trava e arame M8x25	4 Arruelas M8 larga
<b>D</b> Two hexagonal metal nuts.	<b>E</b> One threaded metal screw.	<b>F</b> One hexagonal metal lock nut.
2 Porcas M8	1 Parafuso M6x20	1 Porca M6

## 1º PASSO: Fixação dos braços traseiros

Passe 2 parafusos (B) pelos furos da barra do chassis, encoste a chapa na entrada deixando a rosca do parafuso na horizontal apontado para frente. Passando a entrada, acerte o parafuso no furo de cima para baixo. Fixe com 2 arruelas (C) e 2 porcas (D).

## 2º PASSO: Fixação do braço esquerdo dianteiro

Retirar o parafuso do carro e inserir o braço, utilizar o mesmo parafuso para fixar.

## 3º PASSO: Fixação do braço direito dianteiro

Coloque o parafuso (E) com arruela (C) de cima para baixo.  
Leve o protetor até o local e prenda com 1 arruela (C) e porca (F).

## 4º PASSO:

Apertar bem em conjunto.

**SAC**  
4000 1144  
41 3030 7900

